



**Things to know:**

After a control stop the celcia takes away the heat demand for a while.

After a control stop the celcia will keep the boiler in part load (also in case of weather compensated)

There is no room temperature compensation in case of weather compensated controlling.

Activating fireplace function: if an outside sensor is connected, the boiler goes to weather compensated controlling.

**Errors:**  
 200 (only for weather compensated): no outside sensor connected or controller is broken. Check the outside sensor.  
 203: after a lack of communication with the boiler and/ or gateway (>10 sec). Check the OT connection from the Celcia.

