



Verwijder de vulringen, als de desbetreffende trekontlasting gebruikt wordt.
Remove the filling rings if the relevant pull relief is used.
Enlevez les boucles de remplissage en cas d'utilisation de la sécurité appropriée
Bei Verwendung der entsprechenden Zugentlastung Füllring entfernen.
Rimuovere gli anelli di tenuta se viene utilizzato il relativo sistema di bloccaggio.
Reitre los anillos de carga si se utiliza el alivio de tensión pertinente.

124739-080610



124739