


Regulation

# iSense Pro DIN - AD280

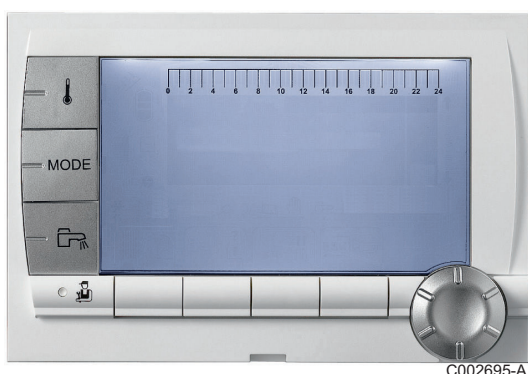

## User Guide

# Contents

---

<b>1</b>	<b>Introduction .....</b>	<b>4</b>
	<b>1.1 Used symbols .....</b>	<b>4</b>
	<b>1.2 Abbreviations .....</b>	<b>4</b>
	<b>1.3 General .....</b>	<b>4</b>
	1.3.1 Manufacturer's liability .....	4
	1.3.2 Installer's liability .....	5
	1.3.3 User's liability .....	5
	<b>1.4 Certifications .....</b>	<b>6</b>
<b>2</b>	<b>Description .....</b>	<b>7</b>
	<b>2.1 Description of the keys .....</b>	<b>7</b>
	<b>2.2 Description of the display .....</b>	<b>8</b>
	2.2.1 Key functions .....	8
	2.2.2 Flame symbol .....	8
	2.2.3 Operating modes .....	8
	2.2.4 Domestic Hot Water override .....	9
	2.2.5 Other information .....	9
<b>3</b>	<b>Operating the appliance .....</b>	<b>10</b>
	<b>3.1 Browsing in the menus .....</b>	<b>10</b>
	<b>3.2 Reading out measured values .....</b>	<b>11</b>
	<b>3.3 Changing the settings .....</b>	<b>12</b>
	3.3.1 Setting the set point temperatures .....	12
	3.3.2 Selecting the operating mode .....	13
	3.3.3 Forcing domestic hot water production .....	14
	3.3.4 Setting the contrast and lighting on the display .....	14
	3.3.5 Setting the time and date .....	15
	3.3.6 Selecting a timer programme .....	15
	3.3.7 Customising a timer programme .....	16

	<b>3.4</b>	<b>Installation shutdown .....</b>	<b>18</b>
	<b>3.5</b>	<b>Frost protection .....</b>	<b>18</b>
<b>4</b>		<b>Troubleshooting .....</b>	<b>19</b>
	<b>4.1</b>	<b>Messages .....</b>	<b>19</b>
	<b>4.2</b>	<b>Faults .....</b>	<b>19</b>
<b>5</b>		<b>Warranty .....</b>	<b>22</b>
	<b>5.1</b>	<b>General .....</b>	<b>22</b>
	<b>5.2</b>	<b>Warranty terms .....</b>	<b>22</b>



# 1 Introduction

---

## 1.1 Used symbols

---

In these instructions, various danger levels are employed to draw the user's attention to particular information. In so doing, we wish to safeguard the user's safety, obviate hazards and guarantee correct operation of the appliance.



### **DANGER**

Risk of a dangerous situation causing serious physical injury.



### **WARNING**

Risk of a dangerous situation causing slight physical injury.



### **CAUTION**

Risk of material damage.



Signals important information.



Signals a referral to other instructions or other pages in the instructions.

## 1.2 Abbreviations

---


- ▶ **DHW:** Domestic hot water
- ▶ **Interscenario switch:** Home automation switch that can be used to centralise and control several scenarios
- ▶ **IOBL:** Carrier current home automation bus
- ▶ **3WV:** 3-way valve

## 1.3 General

---

### 1.3.1. Manufacturer's liability

---

Our products are manufactured in compliance with the requirements of the various European applicable Directives. They are therefore delivered with  marking and all relevant documentation.

In the interest of customers, we are continuously endeavouring to make improvements in product quality. All the specifications stated in this document are therefore subject to change without notice.

Our liability as the manufacturer may not be invoked in the following cases:

- ▶ Failure to abide by the instructions on using the appliance.
- ▶ Faulty or insufficient maintenance of the appliance.
- ▶ Failure to abide by the instructions on installing the appliance.

### **1.3.2. Installer's liability**

---

The installer is responsible for the installation and initial start up of the appliance. The installer must respect the following instructions:

- ▶ Read and follow the instructions given in the manuals provided with the appliance.
- ▶ Carry out installation in compliance with the prevailing legislation and standards.
- ▶ Perform the initial start up and carry out any checks necessary.
- ▶ Explain the installation to the user.
- ▶ If a maintenance is necessary, warn the user of the obligation to check the appliance and maintain it in good working order.
- ▶ Give all the instruction manuals to the user.

### **1.3.3. User's liability**

---

To guarantee optimum operation of the appliance, the user must respect the following instructions:

- ▶ Read and follow the instructions given in the manuals provided with the appliance.
- ▶ Call on qualified professionals to carry out installation and initial start up.
- ▶ Get your fitter to explain your installation to you.
- ▶ Have the required checks and services done.
- ▶ Keep the instruction manuals in good condition close to the appliance.

This appliance is not intended to be used by persons (including children) whose physical, sensory or mental capacity is impaired or persons with no experience or knowledge, unless they have the benefit, through the intermediary of a person responsible for their safety, of supervision or prior instructions regarding use of the appliance. Care should be taken to ensure that children do not play with the appliance.

## 1.4 Certifications


---

This product complies to the requirements to the european directives and following standards:

- ▶ 2006/95/EC Low Voltage Directive. Reference Standard: EN60.335.1.
- ▶ 2004/108/EC Electromagnetic Compatibility Directive. Generic standards: EN1000-6-3 ; EN 61000-6-1.

## 2 Description

### 2.1 Description of the keys

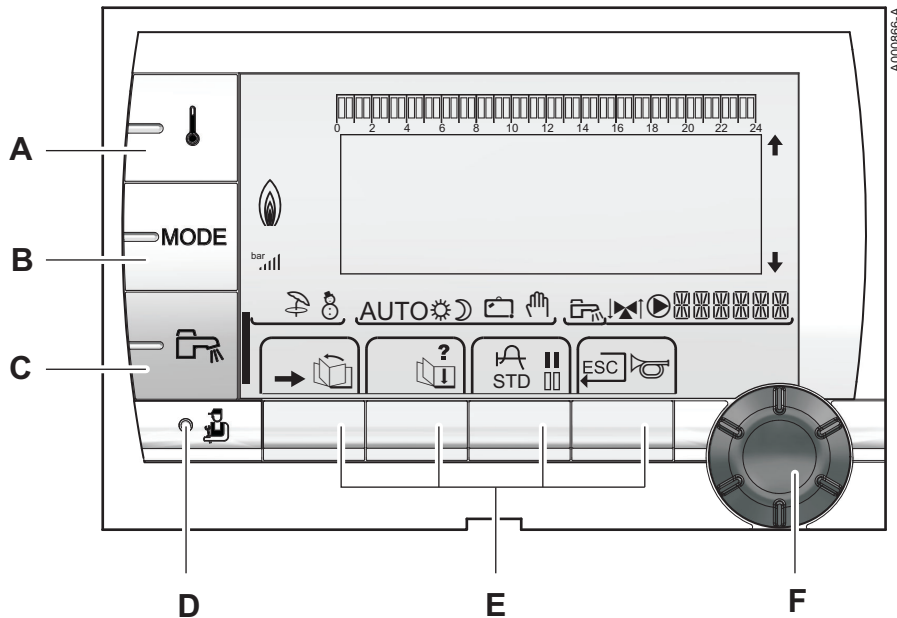








- A** Temperature setting key (heating, DHW, swimming pool)
- B** Operating mode selection key
- C** DHW override key
- D** Key to access the parameters reserved for the installer
- E** Keys on which the function varies as and when selections are made
- F** Rotary setting button:
- ▶ Turn the rotary button to scroll through the menus or modify a value
  - ▶ Press the rotary button to access the menu selected or confirm a value modification

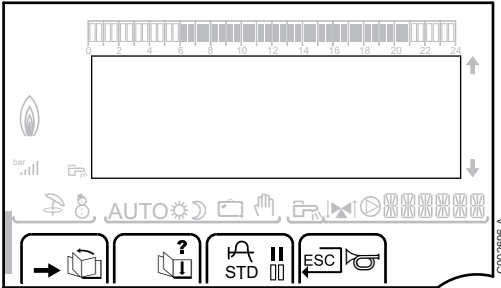


## 2.2 Description of the display

### 2.2.1. Key functions




- Access to the various menus
-  Used to scroll through the menus
-  Used to scroll through the parameters
- ? The symbol is displayed when help is available
-  Used to display the curve of the parameter selected
- STD** Reset of the time programmes
-  Selection of comfort mode or selection of the days to be programmed
-  Selection of reduced mode or deselection of the days to be programmed
-  Back to the previous level
- ESC** Back to the previous level without saving the modifications made

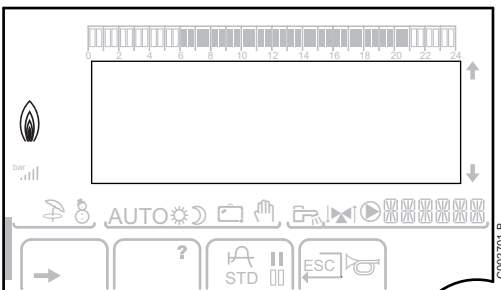

### 2.2.2. Flame symbol






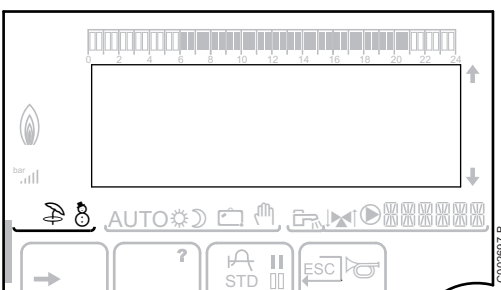

- ▶ The symbol is displayed: The burner is operating.
- ▶ The symbol is not displayed: The burner is off.

### 2.2.3. Operating modes

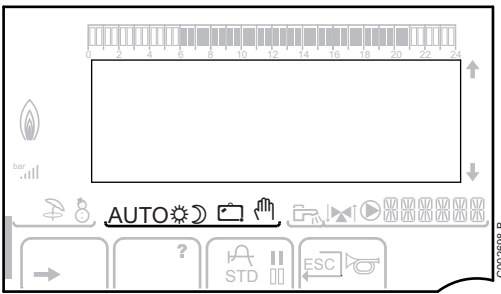


-  Summer mode: The heating is off. Domestic hot water continues to be produced
-  WINTER mode: Heating and domestic hot water working




- AUTO** Operation in automatic mode according to the timer programme
-  Comfort mode: The symbol is displayed when a DAY override (comfort) is activated
  - ▶ Flashing symbol: Temporary override
  - ▶ Steady symbol: Permanent override
-  Reduced mode: The symbol is displayed when a NIGHT override (reduced) is activated
  - ▶ Flashing symbol: Temporary override
  - ▶ Steady symbol: Permanent override
-  Holiday mode: The symbol is displayed when a HOLIDAY override (antifreeze) is activated
  - ▶ Flashing symbol: Holiday mode programmed
  - ▶ Steady symbol: Holiday mode active
-  Manual mode



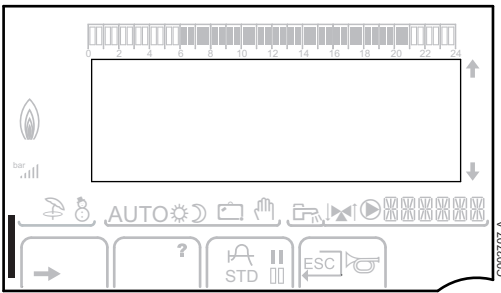



### 2.2.4. Domestic Hot Water override

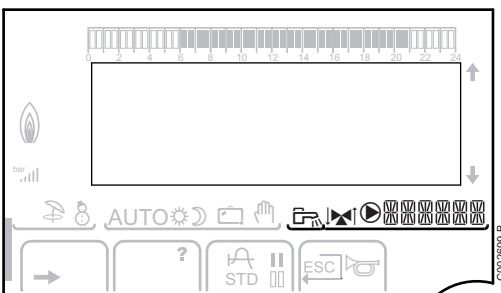

- A bar is displayed when a DHW override is activated:
- ▶ Flashing bar: Temporary override
  - ▶ Steady bar: Permanent override


### 2.2.5. Other information




-  The symbol is displayed when domestic hot water production is running
-  Valve indicator: The symbol is displayed when a 3-way valve is connected
  - ▶  : 3-way valve open
  - ▶  : 3-way valve closed
-  The symbol is displayed when the pump is operating
-  Name of the circuit for which the parameters are displayed

# 3 Operating the appliance


## 3.1 Browsing in the menus

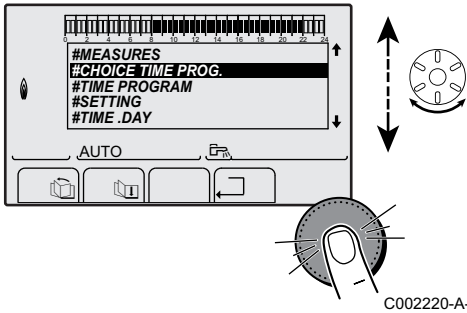

1. To select the desired menu, turn the rotary button.
2. To access the menu, press the rotary button.  
To go back to the previous display, press the key  $\square$ .

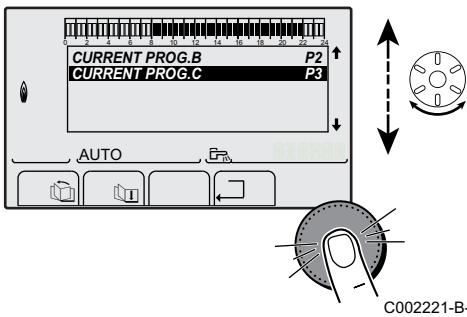


3. To select the desired parameter, turn the rotary button.
4. To modify the parameter, press the rotary button.  
To go back to the previous display, press the key  $\square$ .

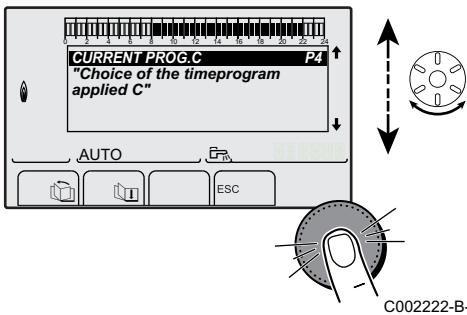

5. To modify the parameter, turn the rotary button.
6. To confirm, press the rotary button.

**i** To cancel, press key **ESC**.

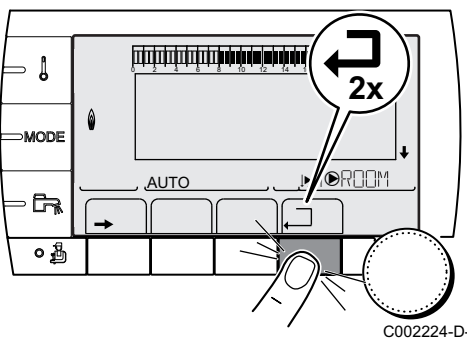

7. To go back to the main display, press key  $\square$  2 times.

**i** It is possible to use the  $\square$  and  $\square$  keys instead of the rotary button.

### 3.2 Reading out measured values


The various values measured by the appliance are displayed in the **#MEASURES** menu.

1. To access "user" level: Press the → key.
2. Select the menu **#MEASURES**.



- ▶ Turn the rotary button to scroll through the menus or modify a value.
- ▶ Press the rotary button to access the menu selected or confirm a value modification.

For a detailed explanation of menu browsing, refer to the chapter: "Browsing in the menus", page 10.

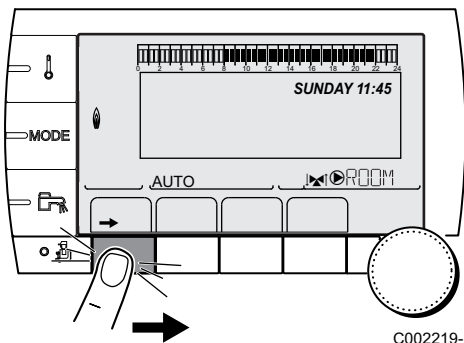

C002219-D-04


"User" level - #MEASURES menu		
Parameter	Description	Unit
<b>OUTSIDE TEMP.</b>	Outside temperature	°C
<b>ROOMTEMP. B</b> <sup>(1)</sup>	Room temperature of circuit B	°C
<b>ROOMTEMP. C</b> <sup>(1)</sup>	Room temperature of circuit C	°C
<b>BOILER TEMP.</b>	Water temperature in the boiler	°C
<b>WATER TEMP.</b> <sup>(1)</sup>	Water temperature in the DHW tank	°C
<b>STOR.TANK.TEMP</b> <sup>(1)</sup>	Water temperature in the storage tank	°C
<b>SWIMMING P.T.B</b> <sup>(1)</sup>	Water temperature of the swimming pool on circuit B	°C
<b>SWIMMING P.T.C</b> <sup>(1)</sup>	Water temperature of the swimming pool on circuit C	°C
<b>OUTLET TEMP. B</b> <sup>(1)</sup>	Temperature of the flow water in circuit B	°C
<b>OUTLET TEMP. C</b> <sup>(1)</sup>	Temperature of the flow water in circuit C	°C
<b>SYSTEM TEMP.</b> <sup>(1)</sup>	Temperature of the system flow water if multi-generator	°C
<b>T.DHW BOTTOM</b> <sup>(1)</sup>	Water temperature in the bottom of the DHW tank	°C
<b>TEMP.TANK AUX</b> <sup>(1)</sup>	Water temperature in the second DHW tank connected to the AUX circuit	°C
<b>IN 0-10V</b> <sup>(1)</sup>	Voltage at input 0-10 V	V
<b>DIN CTRL</b>	Software control number	

<sup>(1)</sup> The parameter is only displayed for the options, circuits or sensors actually connected.

### 3.3 Changing the settings

#### 3.3.1. Setting the set point temperatures

To set the various heating, DHW and swimming pool temperatures, proceed as follows:

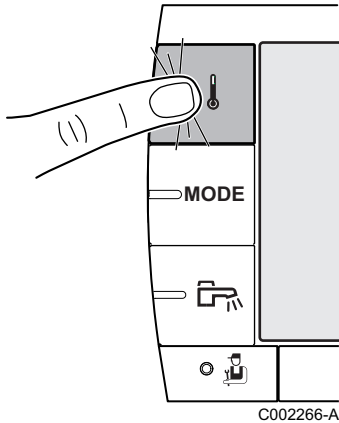

1. Press the ↓ key.
2. To select the desired parameter, turn the rotary button.
3. To modify the parameter, press the rotary button.  
To go back to the previous display, press the key ↵.
4. To modify the parameter, turn the rotary button.
5. To confirm, press the rotary button.


**i** To cancel, press key **ESC**.

Menu ↓			
Parameter	Adjustment range	Description	Factory setting
<b>DAY TEMP. B</b> <sup>(1)</sup>	5 to 30 °C	Desired room temperature in comfort periods on circuit B	20 °C
<b>NIGHT TEMP. B</b> <sup>(1)</sup>	5 to 30 °C	Desired room temperature in reduced periods on circuit B	16 °C
<b>DAY TEMP. C</b> <sup>(1)</sup>	5 to 30 °C	Desired room temperature in comfort periods on circuit C	20 °C
<b>NIGHT TEMP. C</b> <sup>(1)</sup>	5 to 30 °C	Desired room temperature in reduced periods on circuit B	16 °C
<b>WATER TEMP.</b> <sup>(1)</sup>	10 to 80 °C	Desired domestic hot water temperature in the DHW circuit	55 °C
<b>TEMP.TANK AUX</b> <sup>(1)</sup>	10 to 80 °C	Desired domestic hot water temperature in the auxiliary circuit	55 °C
<b>SWIMMING P.T.B</b> <sup>(1)</sup>	5 to 39 °C	Desired temperature for swimming pool B	20 °C
<b>SWIMMING P.T.C</b> <sup>(1)</sup>	5 to 39 °C	Desired temperature for swimming pool C	20 °C

<sup>(1)</sup> The parameter is only displayed for the options, circuits or sensors actually connected.

### 3.3.2. Selecting the operating mode

To select an operating mode, proceed as follows:

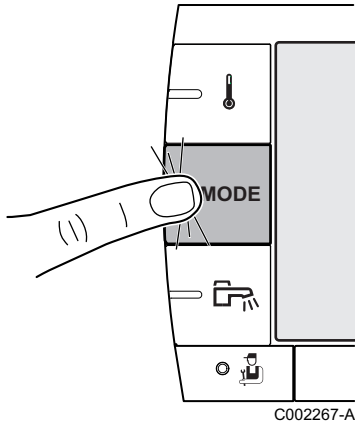

1. Press the **MODE** key.
2. To select the desired parameter, turn the rotary button.
3. To modify the parameter, press the rotary button.  
To go back to the previous display, press the key  $\square$ .
4. To modify the parameter, turn the rotary button.
5. To confirm, press the rotary button.




To cancel, press key **ESC**.

Menu MODE			
Parameter	Adjustment range	Description	Factory setting
<b>AUTOMATIQUE</b>		The comfort ranges are determined by the timer programme.	
<b>DAY</b>	7/7, xx:xx	Comfort mode is forced until the time indicated or all the time (7/7).	Present time + 1 hour
<b>NIGHT</b>	7/7, xx:xx	Reduced mode is forced until the time indicated or all the time (7/7).	Present time + 1 hour
<b>HOLIDAYS</b>	7/7, 1 to 365	The antifreeze mode is active on all boiler circuits. Number of days' holiday: xx heating OFF: xx:xx <sup>(1)</sup> Restarting: xx:xx <sup>(1)</sup>	Present date + 1 day
<b>SUMMER</b>		The heating is off. Domestic hot water continues to be produced.	
<b>MANUEL</b>		The generator operates according to the set point setting. All of the pumps operate. Option of setting the set point by simply turning the rotary button.	
<b>FORCE AUTO</b>	<b>YES / NO</b>	An operating mode override is activated on the remote control (option). To force all circuits to run on <b>AUTOMATIQUE</b> mode, select <b>YES</b> .	

(1) The start and end days and the number of days are calculated in relation to each other.

### 3.3.3. Forcing domestic hot water production

To force domestic hot water production, proceed as follows:

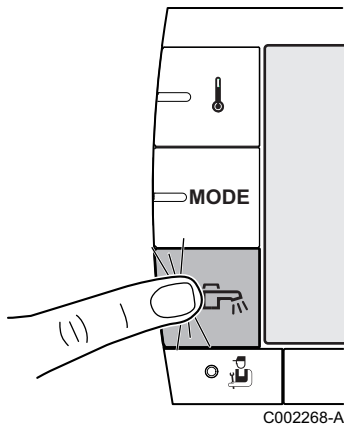


1. Press the **MODE** key.
2. To select the desired parameter, turn the rotary button.
3. To modify the parameter, press the rotary button.  
To go back to the previous display, press the key **←**.
4. To modify the parameter, turn the rotary button.
5. To confirm, press the rotary button.

**i** To cancel, press key **ESC**.

Menu <b>MODE</b>		
Parameter	Description	Factory setting
<b>AUTOMATIQUE</b>	The domestic hot water comfort ranges are determined by the timer programme.	
<b>COMFORT</b>	Domestic hot water comfort mode is forced until the time indicated or all the time (7/7).	Present time + 1 hour

### 3.3.4. Setting the contrast and lighting on the display

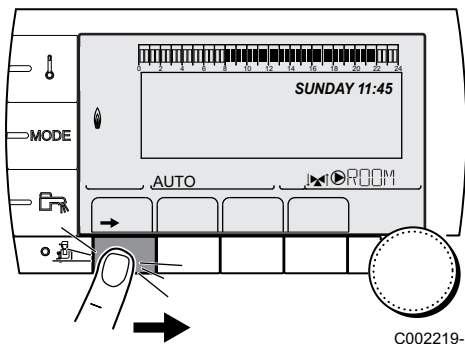

1. To access "user" level: Press the **→** key.
2. Select the menu **#SETTING**.

**i**


- ▶ Turn the rotary button to scroll through the menus or modify a value.
- ▶ Press the rotary button to access the menu selected or confirm a value modification.

**👉** For a detailed explanation of menu browsing, refer to the chapter: "Browsing in the menus", page 10.

3. To set the following parameters:

"User" level - Menu <b>#SETTING</b>				
Parameter	Adjustment range	Description	Factory setting	Customer setting
<b>CONTRAST DISP.</b>		Adjusting the display contrast.		
<b>BACK LIGHT</b>	<b>COMFORT</b>	The screen is illuminated continuously in daytime periods.	<b>ECO</b>	
	<b>ECO</b>	The screen is illuminated for 2 minutes whenever pressed.		

### 3.3.5. Setting the time and date

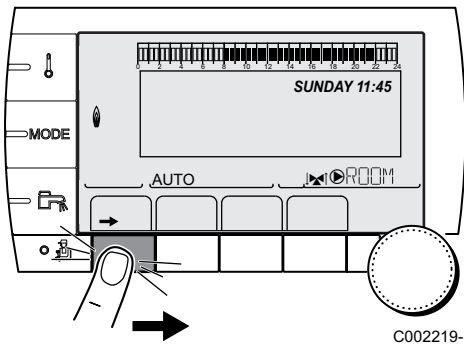

C002219-D-04

1. To access "user" level: Press the → key.
2. Select the menu **#TIME .DAY**.



- ▶ Turn the rotary button to scroll through the menus or modify a value.
- ▶ Press the rotary button to access the menu selected or confirm a value modification.




For a detailed explanation of menu browsing, refer to the chapter: "Browsing in the menus", page 10.

3. To set the following parameters:

"User" level - Menu #TIME .DAY				
Parameter	Adjustment range	Description	Factory setting	Customer setting
<b>HOURS</b>	0 to 23	Hours setting		
<b>MINUTE</b>	0 to 59	Minutes setting		
<b>DAY</b>	Monday to Sunday	Setting the day of the week		
<b>DATE</b>	1 to 31	Day setting		
<b>MONTH</b>	January to December	Month setting		
<b>YEAR</b>	2008 to 2099	Year setting		
<b>SUM. TIME:</b>	<b>AUTO</b>	automatic switch to summer time on the last Sunday in March and back to winter time on the last Sunday in October.	<b>AUTO</b>	
	<b>MANU</b>	for countries where the time change is done on other dates or is not in use.		

### 3.3.6. Selecting a timer programme

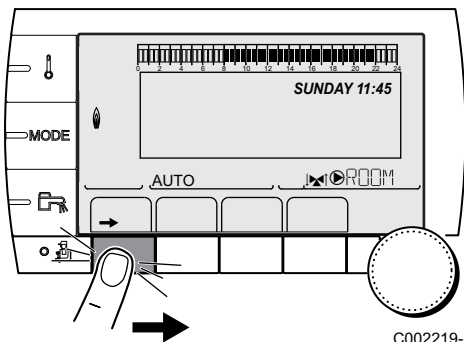

C002219-D-04

1. To access "user" level: Press the → key.
2. Select the menu **#CHOICE TIME PROG..**



- ▶ Turn the rotary button to scroll through the menus or modify a value.
- ▶ Press the rotary button to access the menu selected or confirm a value modification.



For a detailed explanation of menu browsing, refer to the chapter: "Browsing in the menus", page 10.


3. To select the desired parameter.

"User" level - Menu #CHOICE TIME PROG.		
Parameter	Adjustment range	Description
<b>CURRENT PROG.B</b>	P1 / P2 / P3 / P4	Comfort programme activated (Circuit B)
<b>CURRENT PROG.C</b>	P1 / P2 / P3 / P4	Comfort programme activated (Circuit C)

4. Assign the desired timer programme (P1 to P4) to the circuit with the rotary button.



### 3.3.7. Customising a timer programme

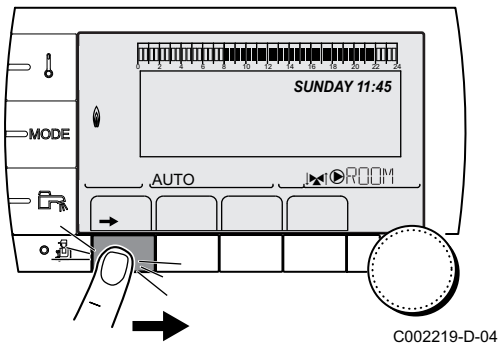

1. To access "user" level: Press the → key.
2. Select the menu **#TIME PROGRAM**.



- ▶ Turn the rotary button to scroll through the menus or modify a value.
- ▶ Press the rotary button to access the menu selected or confirm a value modification.





For a detailed explanation of menu browsing, refer to the chapter: "Browsing in the menus", page 10.

3. To select the desired parameter.

"User" level - Menu #TIME PROGRAM		
Parameter	Time schedule	Description
<b>TIME PROG.B</b>	<b>PROG P2 B</b> <b>PROG P3 B</b> <b>PROG P4 B</b>	Timer programme for circuit B
<b>TIME PROG.C</b>	<b>PROG P2 C</b> <b>PROG P3 C</b> <b>PROG P4 C</b>	Timer programme for circuit C
<b>TIME PROG.DHW</b>		DHW circuit timer programme
<b>TIME PROG.AUX</b>		Auxiliary circuit timer programme

4. To select a timer programme to be modified.
5. **To select to days for which the timer programme is to be modified:**  
Turn the rotary button to the left until you reach the day desired.  
To confirm, press the rotary button.

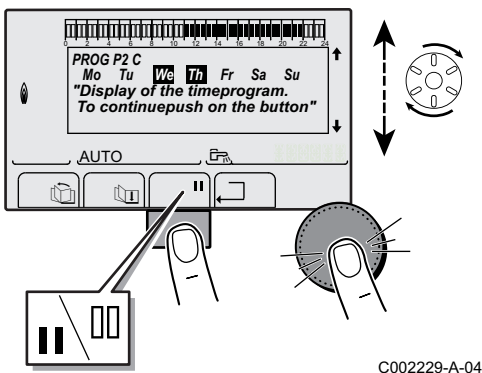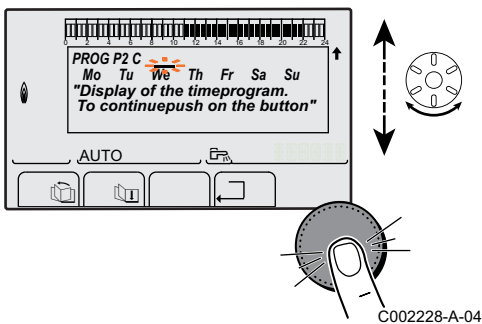


#### 6. **||** : Day selection

Press key **||** / **||** until the symbol **||** is displayed.  
Turn the rotary button to the right to select the day(s) desired.

#### **||** : Cancelling the day selection

Press key **||** / **||** until the symbol **||** is displayed.  
Turn the rotary button to the right to cancel selection of the relevant day(s).

7. When the days desired for the programme have been selected, press the rotary button to confirm.

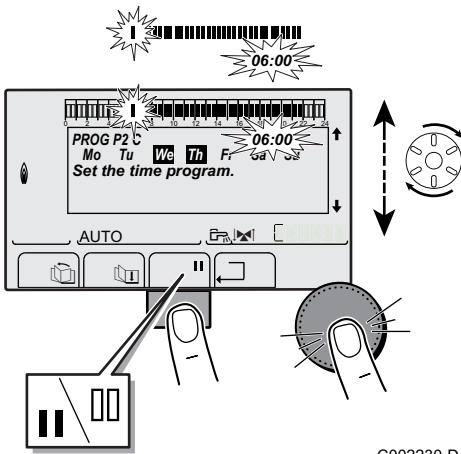

C002230-D-04

8. **To define the timer ranges for the comfort mode and reduced mode:**  
Turn the rotary button to the left until **0:00** is displayed. The first segment of the graphic bar for the timer programme flashes.
9. **|| : Comfort mode selection**  
Press key || / || until the symbol || is displayed.  
To select a comfort time range, turn the rotary button to the right.
- ||| : Reduced mode selection**  
Press key ||| / ||| until the symbol ||| is displayed.  
To select a reduced time range, turn the rotary button to the right.
10. When the times for the comfort mode have been selected, press the rotary button to confirm.

"User" level - Menu #TIME PROGRAM					
	Day	Comfort periods / Filling enabled:			
		P1 _____	P2 _____	P3 _____	P4 _____
<b>TIME PROG.B</b>	Monday	6:00 to 22:00			
	Tuesday	6:00 to 22:00			
	Wednesday	6:00 to 22:00			
	Thursday	6:00 to 22:00			
	Friday	6:00 to 22:00			
	Saturday	6:00 to 22:00			
	Sunday	6:00 to 22:00			
<b>TIME PROG.C</b>	Monday	6:00 to 22:00			
	Tuesday	6:00 to 22:00			
	Wednesday	6:00 to 22:00			
	Thursday	6:00 to 22:00			
	Friday	6:00 to 22:00			
	Saturday	6:00 to 22:00			
	Sunday	6:00 to 22:00			
<b>TIME PROG.DHW</b>	Monday				
	Tuesday				
	Wednesday				
	Thursday				
	Friday				
	Saturday				
	Sunday				
<b>TIME PROG.AUX</b>	Monday				
	Tuesday				
	Wednesday				
	Thursday				
	Friday				
	Saturday				
	Sunday				

## 3.4 Installation shutdown

---

If the central heating system is not used for a long period, we recommend switching the boiler off.

- ▶ Switch the On/Off switch on Off.
- ▶ Isolate the gas supply.
- ▶ Ensure that the boiler and system are protected against frost damage.

## 3.5 Frost protection

---



### CAUTION

If the home is unoccupied for a long period and there is a risk of frost, drain the boiler and the heating system.




### CAUTION

- ▶ The antifreeze protection does not function if the boiler is switched off.
- ▶ The integrated protection system only protects the boiler, not the installation. To protect the installation, set the appliance to **HOLIDAYS** mode.

The **HOLIDAYS** mode protects:

- ▶ The installation if the outside temperature is lower than 3°C (factory setting).
- ▶ The room temperature if a remote control is connected and the room temperature is lower than 6 °C (factory setting).
- ▶ The domestic hot water tank if the tank temperature is lower than 4 °C (the water is reheated to 10 °C).

To configure the holidays mode:  See chapter: "Selecting the operating mode", page 13.

# 4 Troubleshooting


## 4.1 Messages

The iSense Pro DIN module may display the following messages:

Messages	Description	Checking / solution
FL.DRY.B XX DAYS	Floor drying is active XX DAYS = Number of days' floor drying remaining.	Floor drying is underway. Heating on the circuits not concerned is shut down. ▶ Contact the professional who takes care of maintenance of the appliance
FL.DRY.C XX DAYS		
FL.DRY.B+C XX DAYS		

## 4.2 Faults

If a malfunction occurs, the iSense Pro DIN module flashes and displays an error message and a corresponding code.

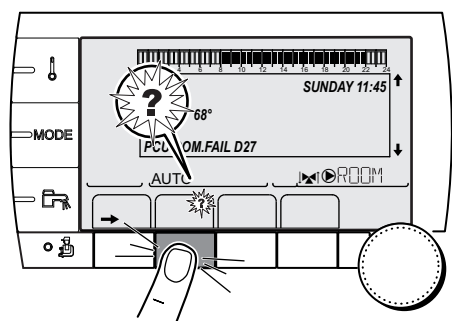

C002302-D-04

1. Make a note of the code displayed.  
The code is important for the correct and rapid diagnosis of the type of failure and for any technical assistance that may be needed.
2. Press the ? key. Follow the instructions displayed to solve the problem.
3. Consult the meaning of the codes in the table below:

Code	Faults	Description	Checking / solution
D03 D04	OUTL S.B FAIL. OUTL S.C FAIL.	Sensor fault flow circuit B Sensor fault flow circuit C Remarks: The circuit pump is running. The 3-way valve motor on the circuit is no longer powered and can be adjusted manually.	Bad connection Sensor fault ▶ Contact the professional who takes care of maintenance of the appliance
D05	OUTSI.S.FAIL.	Fault external sensor Remarks: The boiler operates on <b>BOILER MAX</b> temperature. The valve setting is no longer ensured but monitoring the maximum temperature of the circuit after the valve is ensured. Valves may be manually operated. Reheating the domestic hot water remains ensured.	Bad connection Sensor fault ▶ Contact the professional who takes care of maintenance of the appliance
D07	AUX.SENS.FAIL.	Auxiliary sensor failure	Bad connection Sensor fault ▶ Contact the professional who takes care of maintenance of the appliance
D09	DHW S.FAILURE	Domestic hot water sensor failure Remarks: Heating of domestic hot water is no longer ensured. The load pump operates. The load temperature of the dhw tank is the same as the boiler.	Bad connection Sensor fault ▶ Contact the professional who takes care of maintenance of the appliance
D12 D13	ROOM S.B FAIL. ROOM S.C FAIL.	Fault room temperature sensor B Fault room temperature sensor C Note: The circuit concerned operates without any influence from the room sensor.	Bad connection Sensor fault ▶ Contact the professional who takes care of maintenance of the appliance
D14	MC COM.FAIL	Break in communication between the iSense Pro DIN module and the boiler radio module	Bad connection ▶ Check the link and the connectors Boiler module failure ▶ Change the boiler module
D15	ST.TANK S.FAIL	Storage tank sensor failure Note: The hot water storage tank reheating operation is no longer assured.	Bad connection Sensor fault ▶ Contact the professional who takes care of maintenance of the appliance
D16 D16	SWIM.P.B. S.FAIL SWIM.P.C. S.FAIL	Swimming pool sensor failure circuit B Swimming pool sensor failure circuit C Note: Pool reheating is independent of its temperature.	Bad connection Sensor fault ▶ Contact the professional who takes care of maintenance of the appliance
D17	DHW 2 S.FAIL	Sensor failure tank 2	Bad connection Sensor fault ▶ Contact the professional who takes care of maintenance of the appliance
D29	IOBL.3WV B DEF	Break in communication between the iSense Pro DIN module and the 3WV module	The V3V module is switched off The 3WV module and the iSense Pro DIN module are not connected to the same phase The V3V module has been removed ▶ Contact the professional who takes care of maintenance of the appliance

Code	Faults	Description	Checking / solution
D30	IOBL.3WV C DEF	Break in communication between the iSense Pro DIN module and the 3WV module	<p>The V3V module is switched off  The 3WV module and the iSense Pro DIN module are not connected to the same phase  The V3V module has been removed</p> <p>▶ Contact the professional who takes care of maintenance of the appliance</p>
D31	COM.IOBL FAIL.	The IOBL function is no longer active	<p>Problem on the iSense Pro DIN module</p> <p>▶ Contact the professional who takes care of maintenance of the appliance</p>
D50	DEF.COM.OTH	Break in communication between the iSense Pro DIN module and the boiler control panel.	▶ Contact the professional who takes care of maintenance of the appliance.
D51	DEF XX:SEE BOIL.	An error is displayed on the boiler control panel.	▶ Refer to the boiler's installation and service manual.

# 5 Warranty

---

## 5.1 General

---

You have just purchased one of our appliances and we thank you for the trust you have placed in our products.

Please note that your appliance will provide good service for a longer period of time if it is regularly checked and maintained.

Your fitter and our customer support network are at your disposal at all times.

## 5.2 Warranty terms

---



The following provisions are not exclusive of the buyer being able to benefit from the legal provisions applicable regarding hidden defects in the buyer's country.

Starting from the purchase date shown on the original fitter's invoice, your appliance has a contractual guarantee against any manufacturing defect.

The length of the guarantee is mentioned in the price catalogue.

The manufacturer is not liable for any improper use of the appliance or failure to maintain or install the unit correctly (the user shall take care to ensure that the system is installed by a qualified engineer).

In particular, the manufacturer shall not be held responsible for any damage, loss or injury caused by installations which do not comply with the following:

- ▶ applicable local laws and regulations,
- ▶ specific requirements relating to the installation, such as national and/or local regulations,
- ▶ the manufacturer's instructions, in particular those relating to the regular maintenance of the unit,
- ▶ the rules of the profession.

The warranty is limited to the exchange or repair of such parts as have been recognised to be faulty by our technical department and does not cover labour, travel and carriage costs.

The warranty shall not apply to the replacement or repair of parts damaged by normal wear and tear, negligence, repairs by unqualified parties, faulty or insufficient monitoring and maintenance, faulty power supply or the use of unsuitable fuel.

Sub-assemblies such as motors, pumps, electric valves etc. are guaranteed only if they have never been dismantled.

The legislation laid down by European Directive 99/44/EEC, transposed by legislative decree No. 24 of 2 February 2002 published in O.J. No. 57 of 8 March 2002, continues to apply.

Broag Ltd.  
Remeha House  
Molly Millars Lane  
RG41 2QP WOKINGHAM,  
Berks.

Tel: +44 118 9783434  
Fax: +44 118 9786977  
Internet: uk.remeha.com  
E-mail: boilers@broag-remeha.com

CE

© Copyright

All technical and technological information contained in these technical instructions, as well as any drawings and technical descriptions supplied, remain our property and shall not be multiplied without our prior consent in writing.



300025651-001-A

 **remeha**